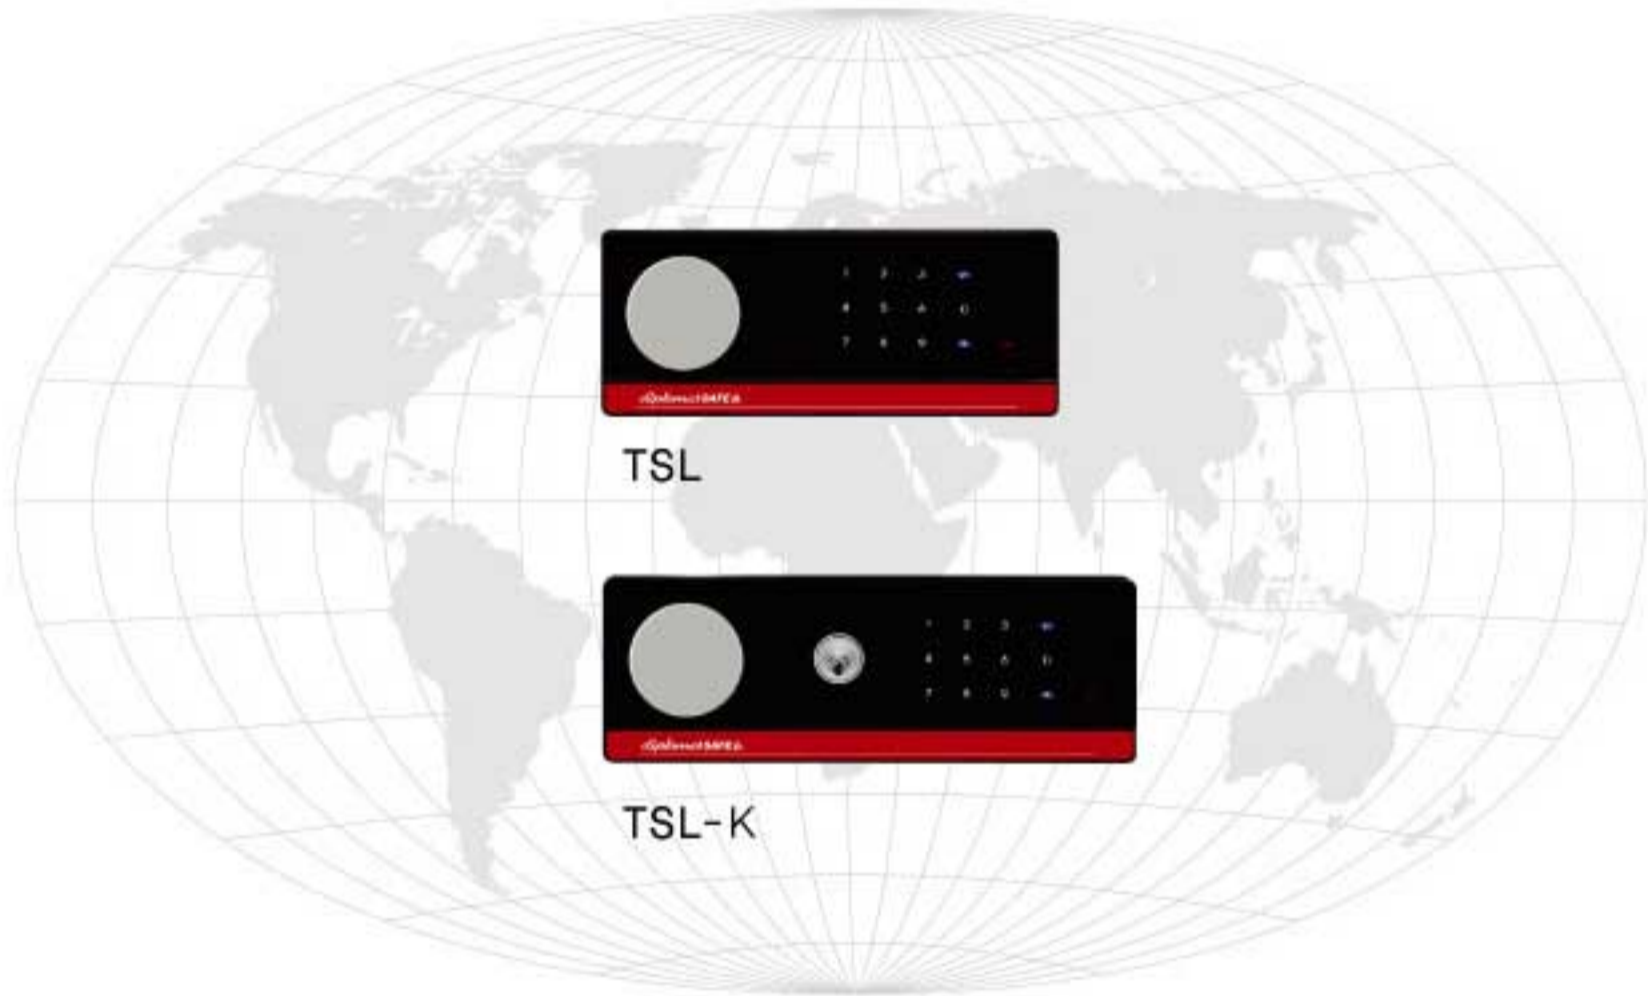
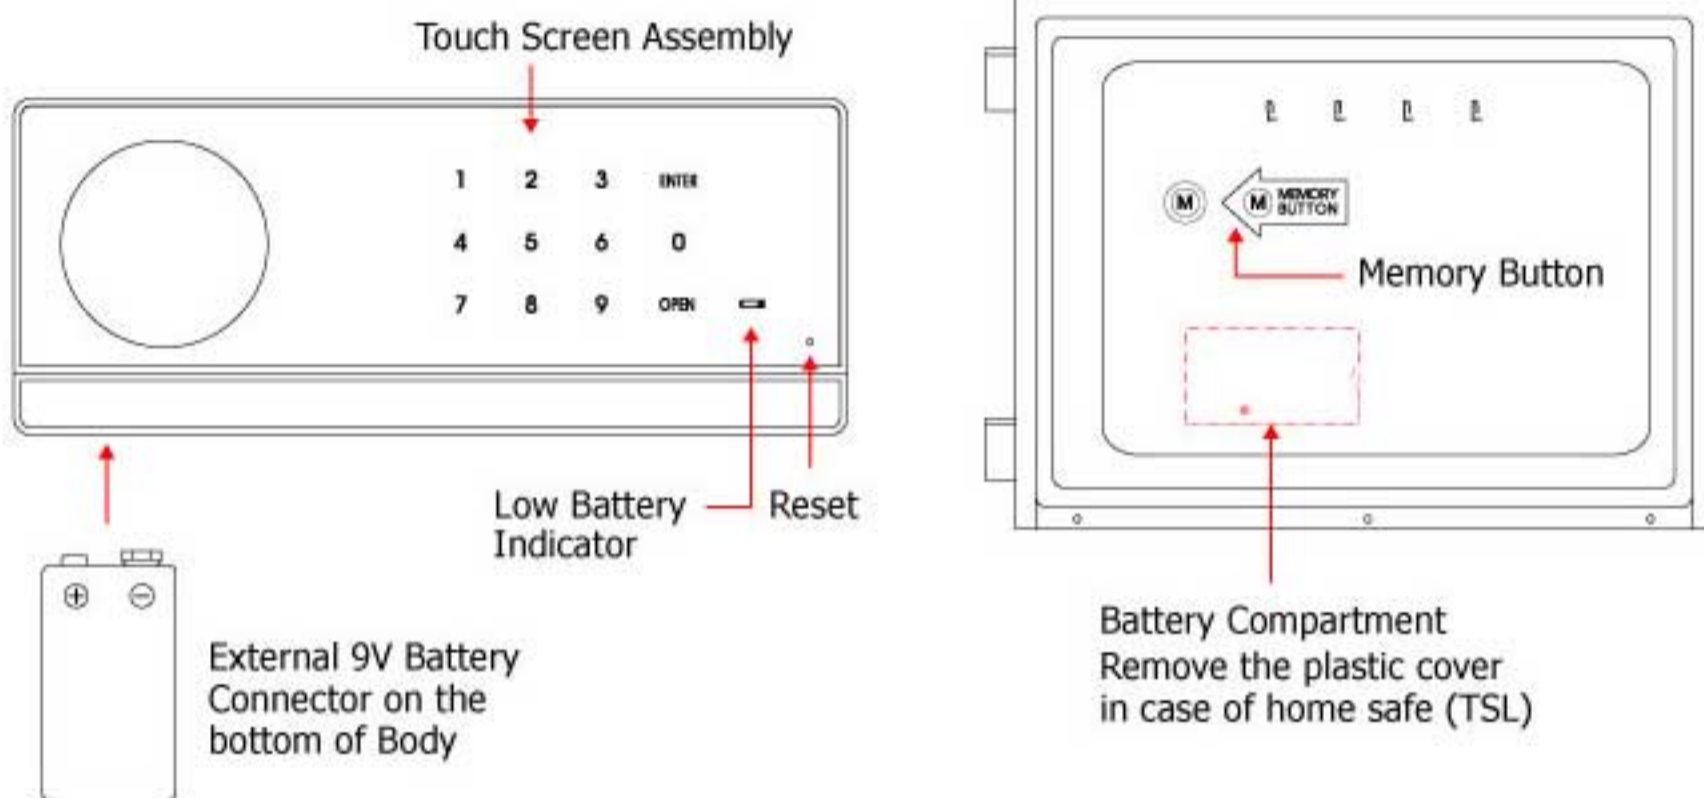

Advanced Touch Screen Lock (TSL)

INSTRUCTION



Quality Guaranteed

TSL Touch Screen Lock



1 Opening the safe?

Please load 4 pcs of batteries (1.5V AA) in the battery compartment on the door back. The initial code from the factory is 1 2 3 4.

- 1) Touch screen. (Bi sound, The numbers appear)
- 2) Touch code numbers. (Bi sound)
- 3) Touch OPEN or the screen. (Melodic tone)
- 4) Turn knob clockwise to open the door while melody rings (3 seconds).
In case of the safe with a TSL-K, turn the key clockwise at 360° and take it out.

Screen → **Code** → **OPEN or Screen**

- 💡 1. In case that wrong code is tried, it sounds Bi-Bi-Bi.
- 2. If wrong codes are tried over 5 times, the lock gets paralysed for 5 minutes.
- Paralysis releases in 5 minutes, the number indicating the rest of paralysis time appears every minute indicating 5, 4, 3, 2, 1.

2 Closing the safe?

Home Safe (TSL) : Close the door, turn knob counter-clockwise.

Office Safe (TSL-K) : Close the door, and turn the key counter-clockwise by 360° to take it out.

- If you don't want to use the keylock in TSL-K, please turn the metal key clockwise by 360° and take it out.

3 How to enter code? (5 different user codes acceptable)

Entering the 1st code? (with the door open)

- 1) Press the memory button on the back of the door. (Bi sound)
- 2) Touch the user code consecutively. (4 digits min to 16 digits max, Bi sound)
- 3) Touch ENTER. (Melodic tone)

Ex) If a user's new code is 2 1 0 0, just touch M 2 1 0 0 ENTER.

M → **User Code** → **ENTER**

- ! With opening procedure, confirm if the code exactly registered.
If a user's new code is 2 1 0 0, just touch SCREEN 2 1 0 0 OPEN (Melodic tone).

Entering four additional user codes? (with the door open)

2nd code **M** → **2** → **ENTER** → **Code** → **ENTER**

3rd code **M** → **3** → **ENTER** → **Code** → **ENTER**

4th code **M** → **4** → **ENTER** → **Code** → **ENTER**

5th code **M** → **5** → **ENTER** → **Code** → **ENTER**

4 Erasing 2nd to 5th codes?

- Individual Code **M** → **ENTER** → **2 (3 4 5)** → **ENTER**

- All codes at a time **M** → **ENTER** → **0** → **ENTER**

- The 1st code can be changed but not be erased.

5 Loading Batteries

- When the batteries are not so strong enough to actuate the lock, a warning battery icon appears when the screen touched. (1.5V AA Alkaline 4pcs)
- Even if batteries are completely exhausted, the codes are preserved in safe condition.
- Battery Life Span : 1 year (3 times a day)

6 The other features

1) **Reset Function** : In case that the TSL doesn't react, push the RESET sensor in the hole with a pin to reset the function.

2) **No Sound - ON / OFF** **M** → **7** → **ENTER**

3) **Alarm setting** : Once Alarm System is affected by shock, Vibration or Tilt, it makes horn immediately.

- ON **ENTER** → **8** → **ENTER**

- OFF **Screen** → **Code** → **OPEN**

4) **Scramble Numbers** : Scramble numbers before and/or after the code can be used for more security.

5) **Emergency Power Supply** : 9V Battery connector is located in the left bottom edge.